

Three Things You Can Do to Help Your Student Chromebook

- 1. Power your Chromebook OFF and restart your device DAILY!
- 2. Clear cache and cookies WEEKLY!
- 3. Only have ONE window with only the tabs for your class CLOSE all windows, especially YouTube!

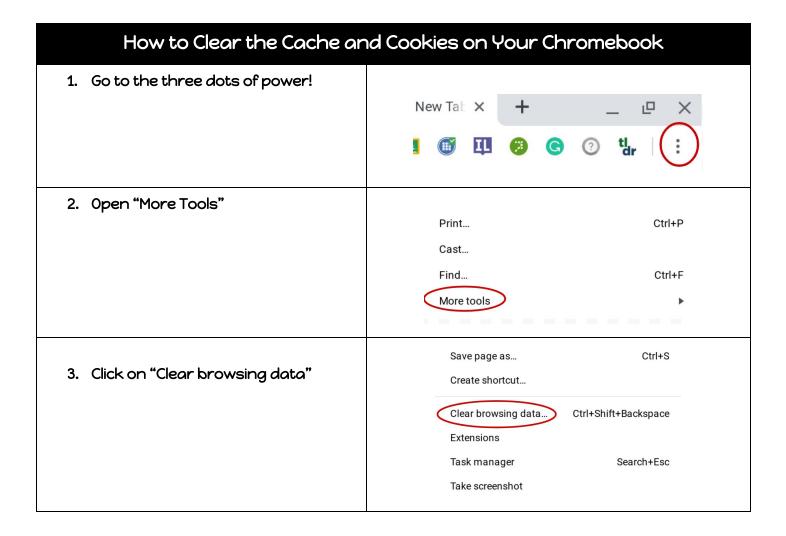

4. Choose "All time", Cookies and Cached, and Clear data

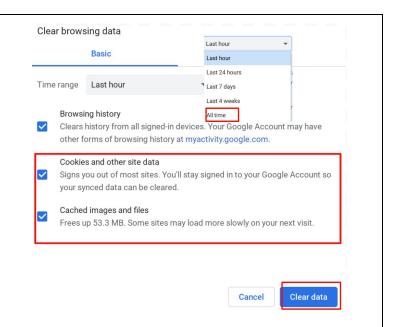

Support Video

How to Clear Cache/Cookies Video

